



Adjustment Procedure

- 1: Select INTERNAL CURRENT, SET CURRENT max CCW
Make sure VR2 is max CW (0 ohm to GND)
Adjust VR2 for zero reading on the display
- 2: Connect a current source and a DMM set to Amp to LOAD input
Adjust SET CURRENT for a reading on the display of 1.00 A
Adjust VR1 for a reading on the DMM of 1.00 A

Zenitek		
H-EL 501 Electronic Load		
HH	Rev 1.0	H*40
	2012-09-16	